

MACHINE OPERATION

1. Install the pad driver and pad, brush or attachment.
2. Plug in machine.
3. Lower the handle to the desired operating position.
4. Place both hands on the handle grips with your fingers around the on/off lever which extends from one side to the other underneath the handle grips.
5. The safety "lock-out" lever is located underneath the right side handle grip and switch lever. To unlock the "lock-out" lever, use your right hand fore finger to press the lever down toward the back of the switch box. (Figure 6)
6. While still pressing the lever, pull the on/off switch lever to start the machine, then release the "lock-out" lever. The "lock-out" lever will automatically engage when you release the on/off switch lever.

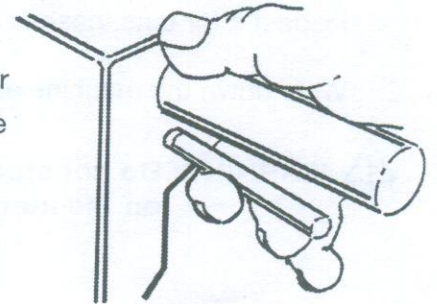


fig 6

TO MANEUVER YOUR FLOOR MACHINE

1. Raise the handle slightly and the machine will go to the right. The higher you raise it, the faster it will go.
2. Lower the handle and the machine will go left. The more you lower it, the faster it will go.
3. Practice on a smooth surface until you gain experience in operating the unit.

TO RE-ADJUST THE HANDLE-LOCK MECHANISM

Unlock the handle and place it in the upright position. Tighten the adjusting nuts until there is a slight drag when the handle is raised or lowered. (Figure 7)

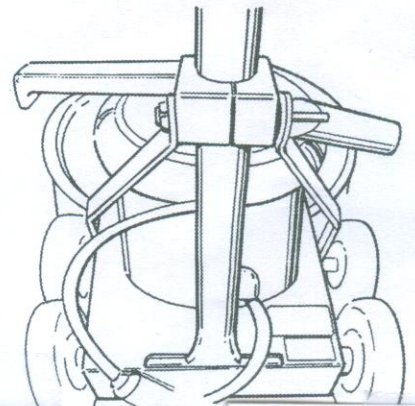


fig 7